




INSTALLATION INSTRUCTIONS

For Model 19006,19007

READ AND SAVE THESE INSTRUCTIONS

These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning installation of the lighting fixture.

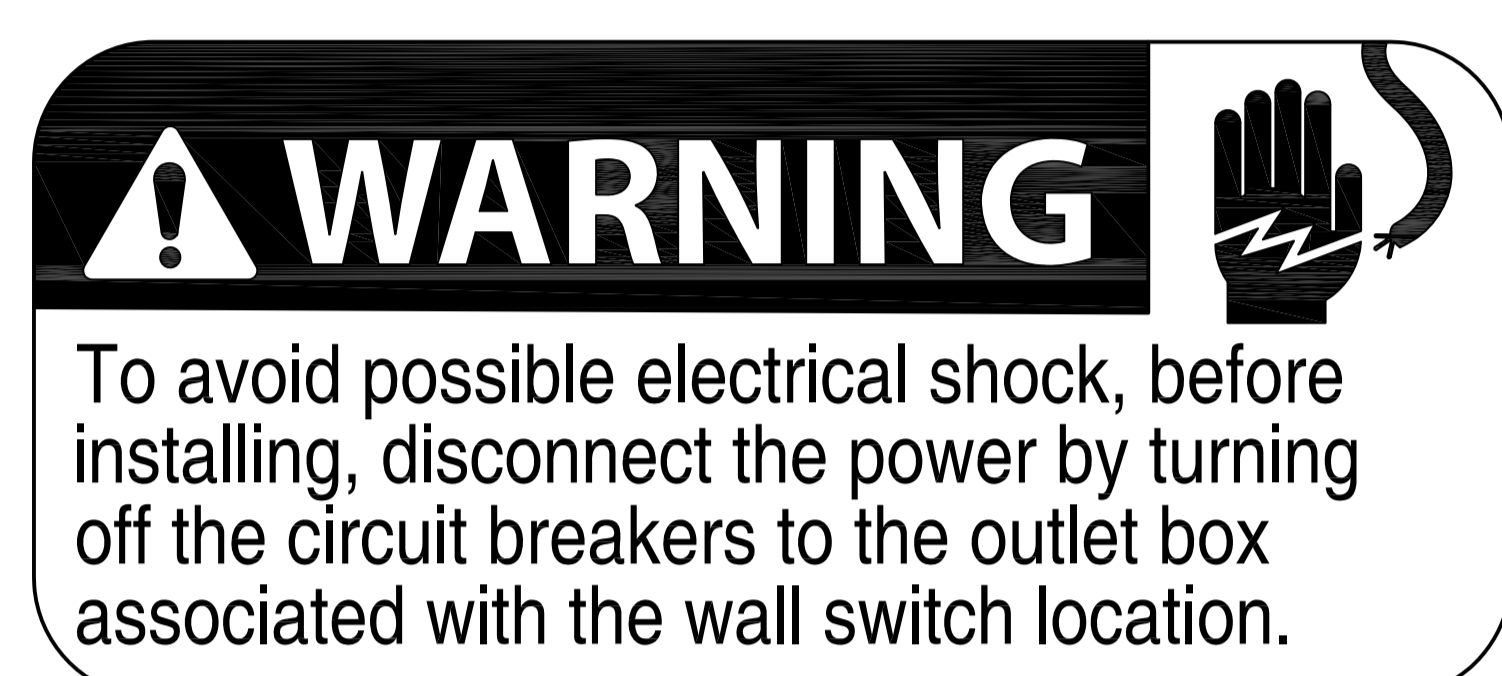



PREPARING FOR INSTALLATION

Carefully remove all contents from the carton. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting bracket. Remove the new mounting bracket assembly from the bag. Mounting plate (B) contains several pairs of threaded holes. Find the pair of holes that matches the spacing on the holes on the fixtures canopy. Attach two mounting screws (A) to the mounting plate (B). Tighten nuts (C) to hold the screws in place. Place the mounting plate (B) over the junction box so that mounting screws (A) and nuts (C) are visible. Pull the house wires through the center of mounting plate (B). Secure mounting plate (B) to the junction box by tightening the screws (D).

ASSEMBLING THE FIXTURE

Carefully remove the fixture from the carton. Pull the excess wire (U) to the side of the hook (R). Then lock the hook (T) into loop (V). Unscrew the external tooth-lock washer (N). Then open the cover (O). Pull the wire (U) from inner column (P), and adjust the wire length. Place the excess wire (U) inside the column (P). Tighten the washer (N) with cover closed (O). Lift up the column (P) and lock the rod hooks (R) (T) into loops (Q) (V). Hold the column (P) sustain the whole weight when installing 4 rods. Otherwise, the hooks (Q) (V) and rods (S) may come off.


There are 4 12-inch rods (K), and 1 6-inch rod (L) included for each fixture. Determine the correct number

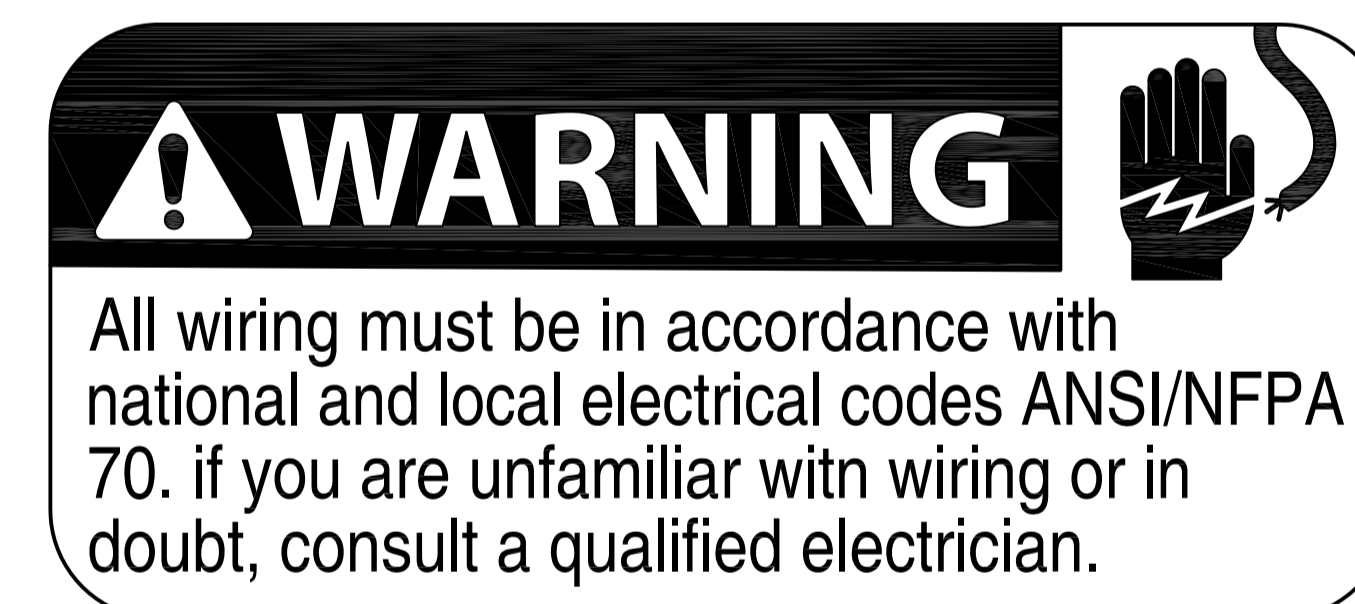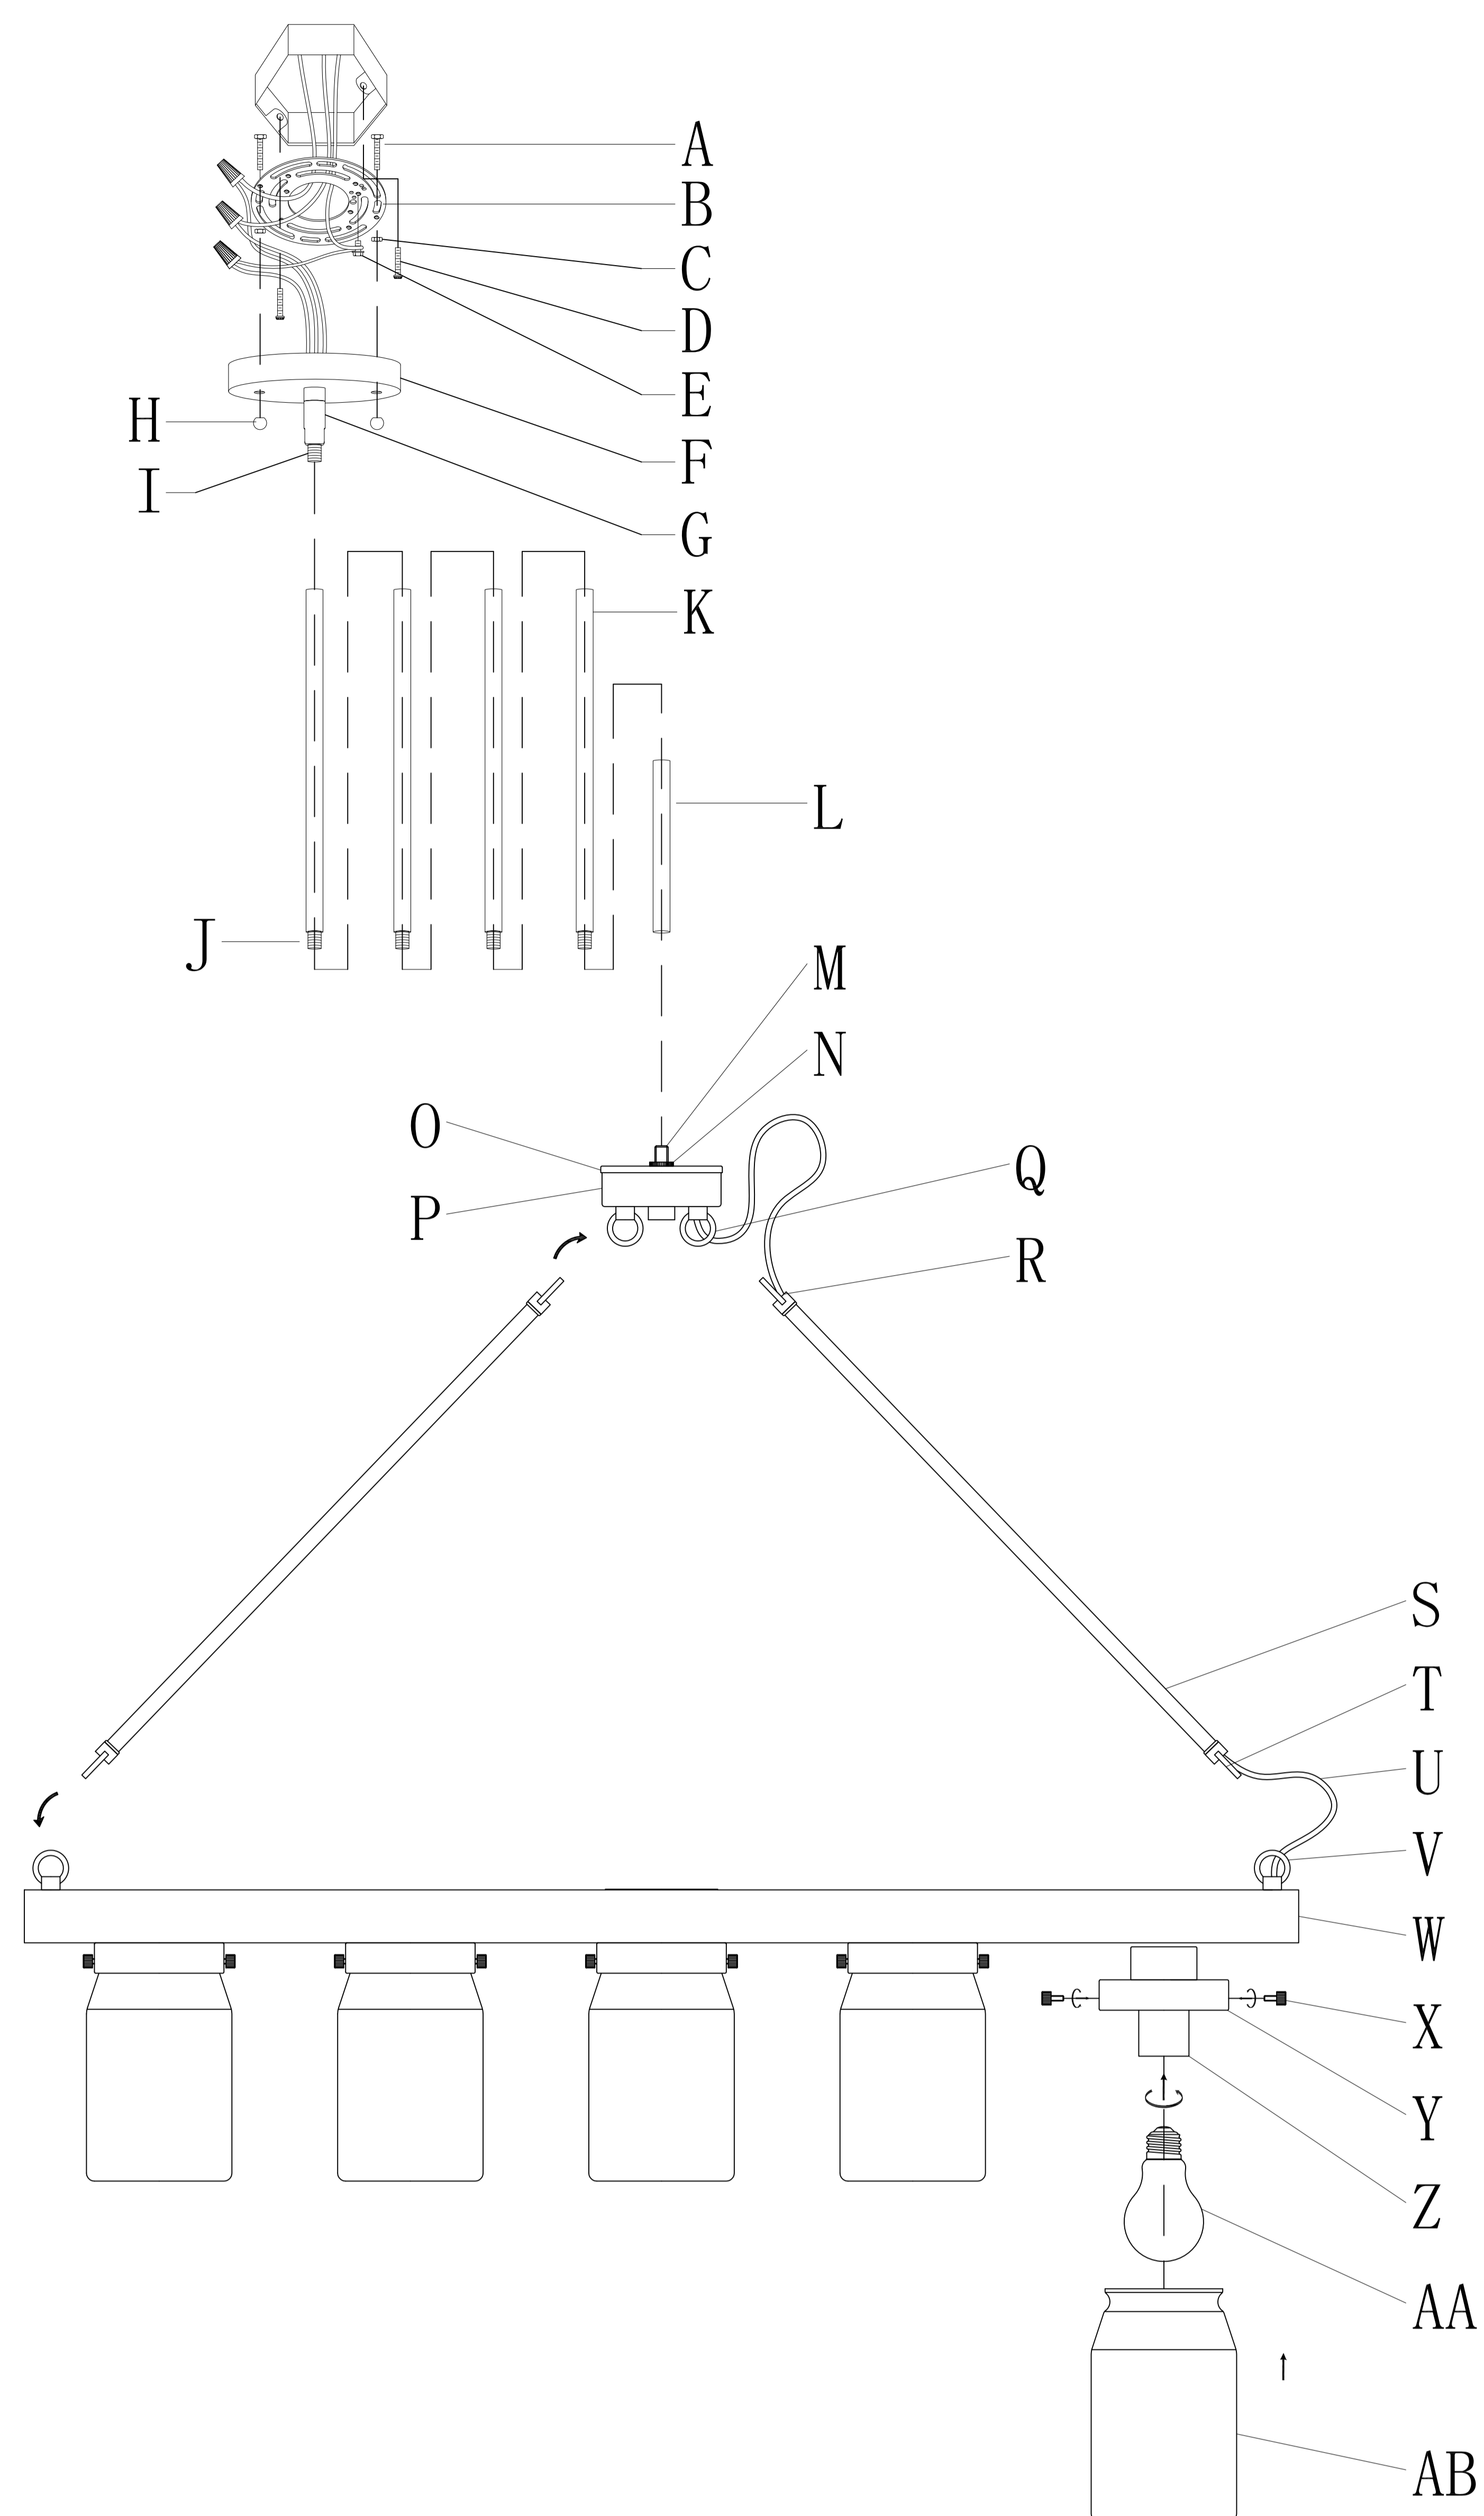

of rods needed for proper hanging height. To lengthen the fixture, add additional rods. To shorten the fixture, trim the wires to desired length. Leave at least 8 to 10 inches of wire in addition to the desired length and slide any excess rods off the fixture's wiring to discard. Keep in mind that you must use at least one rod to hang the fixture. Thread the wires through the rods and pull the wires until taut before connecting the rods together. Screw rod onto ring (M) on the fixture. Screw the ring of the top rod to swivel post (I) of canopy (F). Pull the fixture wires through the top of the canopy.

CONNECTING THE WIRES

Have a helper support the fixture's weight while completing the wiring. Attach the fixture's wires to the power supply wires from the junction box. Connect black to black (Live); white to white (grounded); grounding to grounding (green or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (green or copper) from the junction box, contact a qualified electrician.

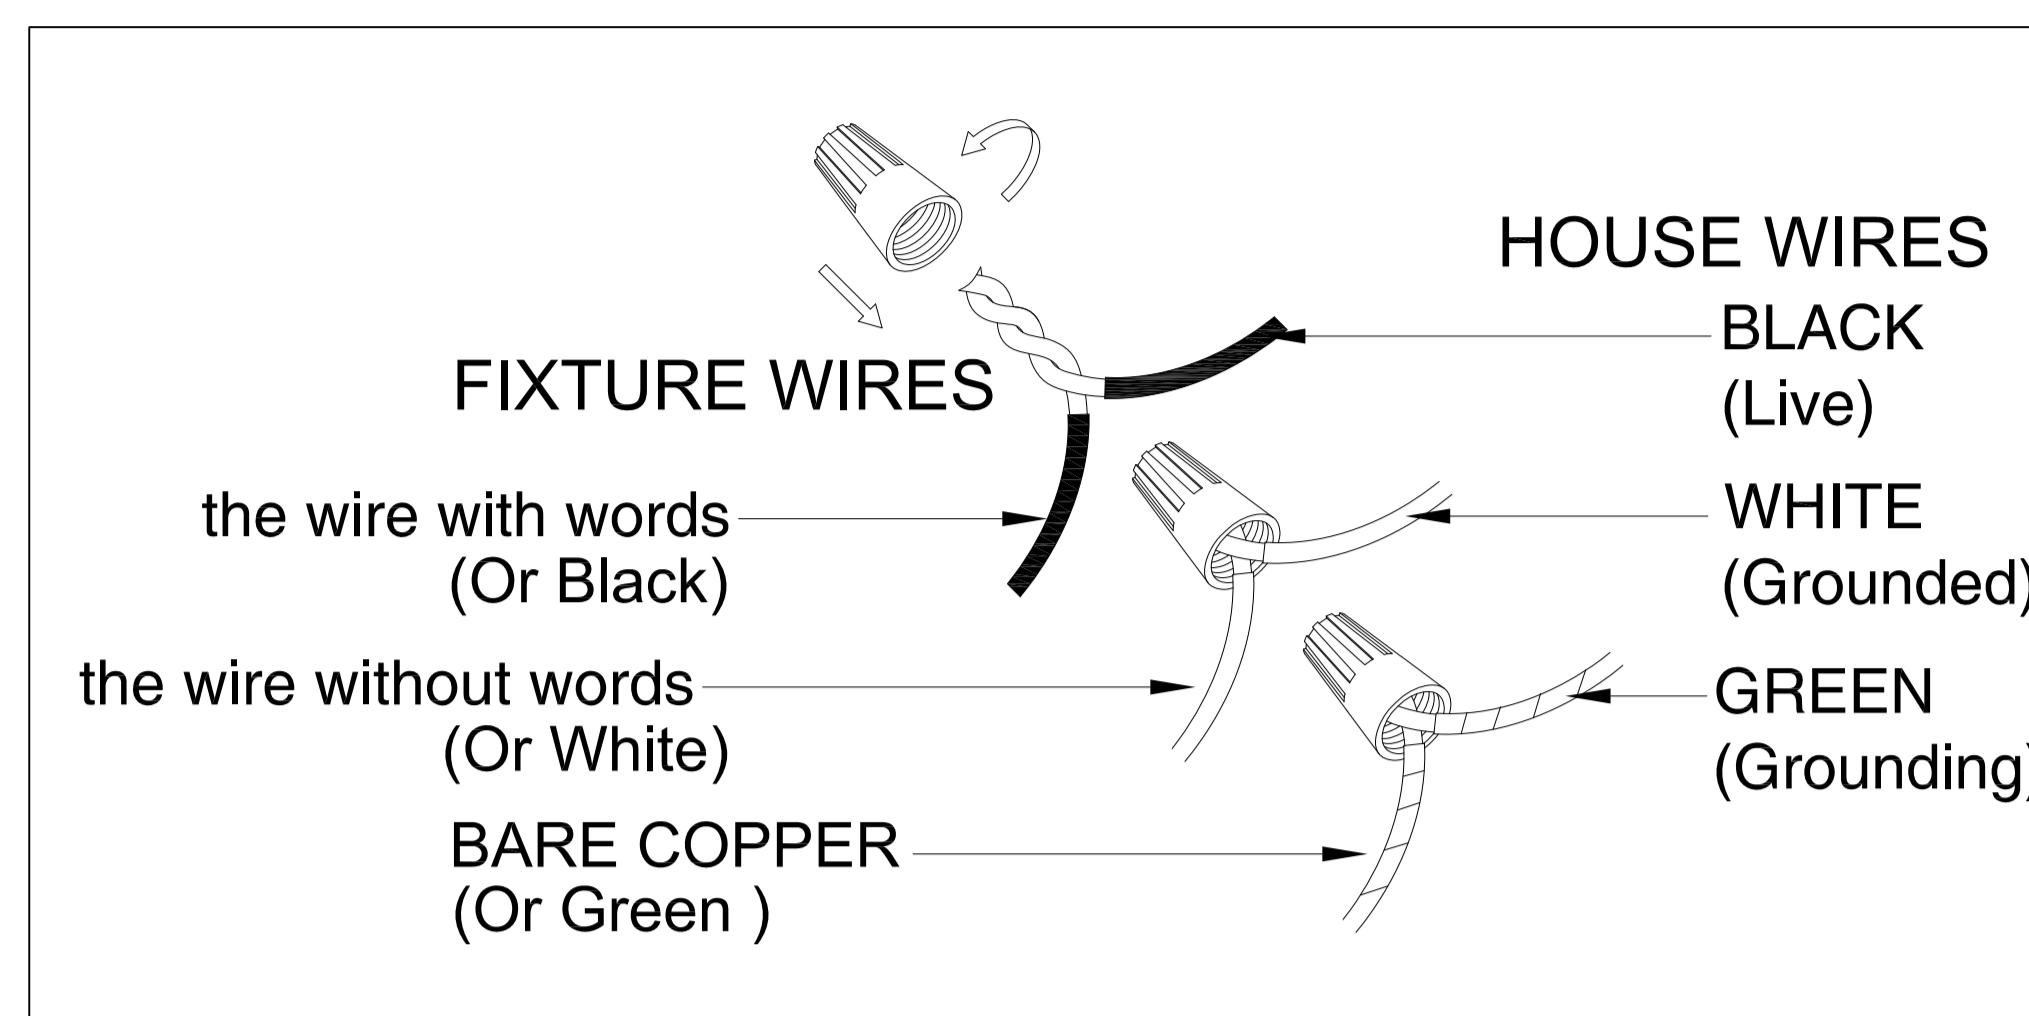

FINISHING THE INSTALLATION

Raise canopy (F) to mounting plate (B) and position mounting screws (A) so that they protrude through the openings of canopy (F). Secure canopy (F) in place with decorative nuts (H).

Install light bulb (not included) in accordance with the fixture's specifications. Do not exceed the recommended wattage.

Secure glass (AB) onto the socket (Y) with screws (X).

Your installation is now complete. Turn on the power and test the fixture.

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.